A RIDER PUBLICATION

W H Lounsberry

FEATURING TV PICTURE TUBES

SECOND SUPPLEMENT

RECEIVING TUBE SUBSTITUTION GUIDE BOOK

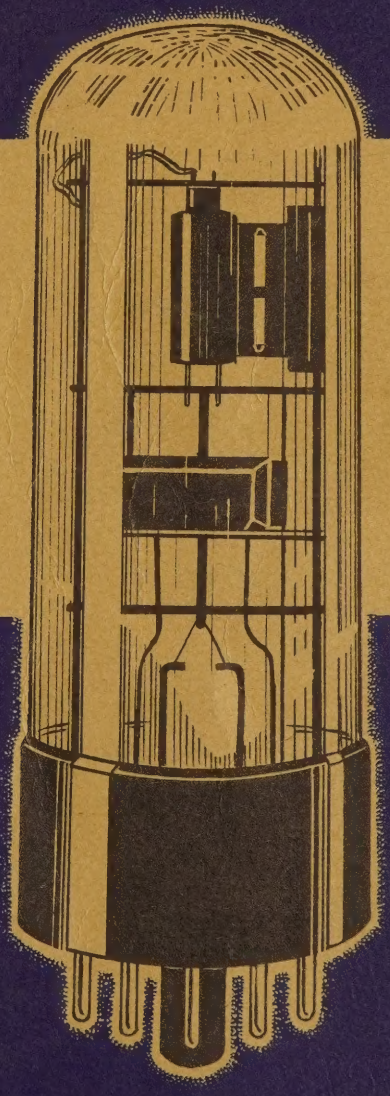

BY H. A. MIDDLETON

CAT. NO. 139-2

$.99

SECOND SUPPLEMENT

RECEIVING TUBE SUBSTITUTION GUIDEBOOK

BY

H. A. MIDDLETON

JOHN F. RIDER PUBLISHER, INC.
480 CANAL STREET NEW YORK 13, N. Y.

Copyright 1954 by JOHN F. RIDER

All rights reserved. This book or parts thereof may not be reproduced in any form or in any language without permission of the publisher.

Printed in the United States of America

FOREWORD

This Second Supplement to the Receiving Tube Substitution Guidebook, in addition to the original volume and the First Supplement to it, is an accumulation of over twelve years of experience in substituting tubes in radios, television receivers and other electronic equipment. It is a never-ending process which we shall continue in an effort to keep your information as current as possible.

Most of these additional substitutions are for use in television receivers and therefore, because of their critical application in some cases, special consideration should be given your selection when you have a choice of substitutes. A stage-by-stage discussion of the most popular circuits used in television receivers is included in the First Supplement. If there is any question as to whether or not the stage being substituted is a critical one and which characteristics of the substitute should be given special consideration, take a moment to read the article covering the stage in question.

The information herein, in the large part, calls for substitutions only. It is not the object of these instructions to tell you how to improve radios, television receivers and other electronic equipment but rather to help you use the tubes you have, in order to replace those that are not available. Exceptions to the above statement are tubes especially designed as replacements of types where improvement is needed generally or for specific use such as 5881 for 6L6, 5AW4 for 5U4G, 6CU6 for 6BQ6GT, and the same type numbers in ruggedized tubes designated by an additional ending letter, as 6SN7WGT. Types such as these are designed to improve the life of the tube, the efficiency of the circuit in which they are applied, or both. Characteristics are generally identical to the type they replace. Elements are heavier duty or especially treated in order to withstand greater overloads and construction is more rugged.

Also included in this supplement is a cumulative index indicating the volume and page where the tube you wish to substitute is located.

We have endeavored to list all the practical substitutions. Some, no doubt, have been omitted. When considering substitution, others not listed will likely come to mind. When this happens, write the tube number down immediately in the form used here and attach it in its proper place.

This supplement includes picture tube substitutions. It is recommended that before substitution of picture tube is attempted, a few moments be taken to read over the short article which precedes the picture tube section.

Phoenix, Arizona
January, 1954

H. A. Middleton

TABLE OF CONTENTS

Page

SECTION 1 — RECEIVING TUBE SUBSTITUTIONS 1

SECTION 2 — PICTURE TUBE SUBSTITUTIONS 13

Substituting Picture Tubes in TV Receivers 13

Picture Tube Substitutions 15

CUMULATIVE INDEX 27

Receiving Tubes 27

Picture Tubes 39

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
1B3	1AX2	E	Change socket to noval and rewire as follows:
	1X2A	E	No. 2 on octal to No. 2 noval 7 to 8 ORIG. SUB. Pins 3 and 7 may be used as tie points for filament and high voltage filter resistors.
1D5GP	1N5GT	G	Parallel circuits – add 10 ohm 1/2 watt resistor in series with filament circuit. Series circuits — in addition to above resistors, shunt a 200 ohm 1/2 watt resistor across the combination.
	1P5	G	Same as above.
1X2 1X2A	1AX2	E	It may be necessary to increase the filament current by removing the filament resistor or adding a turn to the filament loop.
5AW4	5U4	G	No changes.
	5X4	G	
	5V4	G	
5AZ4	5AW4		
5R4GY	5AW4		
5T4	5AW4		
5U4	5AW4		
5V4	5AW4		
5W4	5AW4		
5X4	5AW4		
5Y3	5AW4		
5Y4	5AW4		
5Z3	5AW4		
5Z4	5AW4		
6AB4	6AQ6	P	Rewire as follows: Remove wires anchored on No. 5 and tape up. Disconnect No. 2 if grounded. ORIG. No. 7 to No. 2 1 to 7 6 to 1 SUB. Connect Nos. 5 and 6 to chassis.
	6AV6	P	Same as above. Parallel circuits only.
	6BF6	P	
	6BK6	P	
	6BT6	P	
	6BU6	P	
6AF4	6AN4	G	No changes.
6AG5	6CF6	G	

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6AH4	6BL7 6BX7	E E	Parallel circuits only. Rewire as follows. No. 8 to No. 3 2 to 8 Connect together Nos. 3 & 6, 2 & 5, 1 & 4.
	6F6 6K6 6L6 6U6 6V6 6W6	G G E E E E	Parallel circuits only. Rewire as follows: No. 5 to No. 3 &4 1 to 5
	6SN7	E	Parallel circuits only. Rewire as follows: No. 8 to No. 3 2 to 8 Connect together Nos. 3 & 6, 2 & 5, 1 & 4.
	12AU7 12BH7	E	Parallel circuits only. Change socket to noval and rewire as follows: No. 1 to No. 2 5 to 1 8 to 3 2 to 9 7 to 4 Connect together Nos. 1 & 6, 2 & 7, 3 & 8, 4 & 5.
6AH6	6CH6	G	Parallel circuits only. Change socket to noval and rewire as follows: No. 1 to No. 2 2 to 9 3 to 4 4 to 5 5 to 7 6 to 8 7 to 3 Nos. 1 and 6 are internal connections in the 6CH6 tube. Do not use these for tie points.
6AJ4	6AM4	G	No changes.
6AJ5	6CF6	P	Parallel circuits only. No changes.
6AJ8	12AH8	G	This will operate if pins 7 & 9 are connected together. Rewire as follows: Remove wires from No. 9 and put them on No. 7. Remove wires from No. 4 (or 5) and put them on No. 9. Connect No. 4 to No. 5.
6AK5	6CF6	G	

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6AK6	6AM5	G	Parallel circuits only. Rewire as follows: No. 7 to No. 2 6 to 7
6AK8	6T8	E	No changes.
6AM4	6AJ4	E	No changes.
	6AN4	G	Change socket to 7 pin and rewire as follows: All connections to Nos. 1, 3, & 4 must go to No. 2. All connections to Nos. 6 & 9 must go to No. 6. Then as follows: No. 2 to No. 5 5 to 1 or/& 7 7 to 3 8 to 4
	6Q4	G	Parallel circuits only. Rewire as follows: No. 3 to No. 1 (Let any other connections to No. 1 stay there). 2 to 3 4 to 2 7 to 4 9 to 7 5 to 9 8 to 5 6 to 8
6AM5	6AK6	E	Heater current different, make necessary changes in series circuit. Rewire as follows: Remove wires from No. 6 and tape up. No. 6 to No. 7 Connect Nos. 7 and 2 together.
6AN4	6AF4	G	No changes.
	6T4	G	No changes.
	6AM4	G	Change socket to noval and rewire as follows: Connections to No. 2 may be distributed between Nos. 1, 3, & 4. Connections to No. 6 may be split up between Nos. 6 and 9. Then as follows: No. 4 to No. 8 3 to 7 1 & 7 to 5 5 to 2
6AQ5	6BM5	E	No changes.
6AS5	6BM5	G	Parallel circuits only. Same as 6AS5 to 6AQ5.
6AV6	6BT6	G	No changes.
6BA6	6CG6	G	
6BC5	6CF6	G	
6BJ6	6BA6	E	Parallel circuits only. No changes.
	12BA6	E	Series circuits only. No changes.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6BK5	6BW6	G	Parallel circuits only. Rewire as follows: Remove and tape up any wires connected to No. 2 and No. 9. No. 1 to No. 7 3 & 7 to 1 & 2 6 to 9 Connect Nos. 3 and 9 together.
	5686	P	Parallel circuits only. Rewire as follows: Remove and tape up any wires on No. 2 and No. 9 No. 3 & 7 to No. 2 1 to 7 6 to 3 8 to 6 Do not use any other pins for tie points.
6BK7	6BQ7	G	No changes.
	6BZ7	G	No changes.
	5670	G	Parallel circuits only. Rewire as follows: Reverse 1 & 4 2 & 3 5 & 9
6BL7	6BX7	E	No changes.
6BM5	6AQ5	E	No changes.
6BQ6	6CU6	E	No changes.
6BQ7	6BK7	G	No changes.
	6BZ7	E	No changes.
	5670	G	Same as 6BK7 to 5670
6BT6	6AV6	E	No changes.
6BW6	6BK5	G	Parallel circuits only. Rewire as follows: Tape up any wires connected to No. 6. No. 1 & 2 to No. 3 or/& 7 3 to 6 7 to 1 9 to 6
6BX6	6BY7	E	No changes.
6BX7	6BL7	E	No changes.
6BY5	5V4	G	This may be used if the two cathodes of the 6BY5 are connected together, and are also connected to the heater. Connect No. 1 and No. 2 together. No. 8 to No. 1 & 2 5 to 6 Connect a 10 watt 1/2 ohm resistor in series with one side of heater.
	6AX6	E	Parallel circuits only. Rewire as follows: No. 4 to No. 3 1 to 4
	6AX4	G	In damper service where both sections are paralleled.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6BY5	6U4	P	Rewire as follows:
	6W4	G	No. 1 & 8 to No. 3 4 to 5 2 to 8
			ORIG. SUB.
6BY7	6BH5	G	Rewire socket as follows: Remove any wires from pin No. 6 and tape up. In series circuit shunt 68 ohm 1 watt resistor across 4 & 5. No. 1 to No. 3 7 to 6 8 to 1 9 to 3 Note — pins 7 and 8 are internal connections on the 6BH5 and must not be used for tie points. No. 9 may be used for a tie point.
			ORIG. SUB.
	6BX6	E	No changes.
6BZ7	6BK7	G	No changes.
	6BQ7	E	No changes.
	5670	G	Same as 6BK7 to 5670
6C4	6AQ6	P	Rewire as follows: Remove and tape up wires connected to No. 2. No. 7 to No. 2 1 & 5 to 7 6 to 1 Connect Nos. 5 and 6 to chassis.
			ORIG. SUB
	6AV6	P	Same as above. Parallel circuits only.
	6BF6	P	
	6BK6	P	
	6BT6	P	
	6BU6	P	
6C5	12AT7		Same as 6C5 to 12AU7. In addition, connect together Nos. 1 and 6, 2 and 7, 3 and 8.
			ORIG. SUB.
	12AU7	E	Change socket to noval and rewire as follows: Remove and tape up any wires connected to Nos. 1, 4 and 6. No. 2 to No. 4 & 5 3 to 1 5 to 2 7 to 9 8 to 3
			ORIG. SUB.
	12AV7	G	Same as 6C5 to 12AU7. Parallel circuits only.
	12AX7	P	Same as 6C5 to 12AU7.
	12AZ7	G	Same as 6C5 to 12AU7. Parallel circuits only.
	12BH7	G	Same as 6C5 to 12AU7. Parallel circuits only.
6CB6	6CF6	E	No changes.
6CG6	6AG5	G	Remove and tape up wires on No. 2.
	6AH6	G	Parallel circuits only. No changes.
	6AJ5	G	Same as 6CG6 to 6AG5.
	6AK5	G	Same as 6CG6 to 6AG5.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6CG6	6AM6	G	Rewire as follows: Remove wires from No.2. No. 7 to No. 2 6 to 7 Wires removed from No. 2 connect to No. 6.
	6AU6	G	No changes.
	6BA6	G	No changes.
	6BC5	G	Same as 6CG6 to 6AG5.
	6BD6	E	No changes.
	6BH6	G	Parallel circuits only. Reverse Nos. 2 and 7.
	6BJ6	G	Parallel circuits only. Reverse Nos. 2 and 7.
	6CF6	G	
6CF6	6AG5	G	No changes.
	6AJ5	P	Parallel circuits only. No changes.
	6AK5	G	No changes.
	6AK6	G	Parallel circuits only. Change connections as follows: Reverse connections between terminals 2 and 7.
	6AU6	G	Change connections as follows: Reverse connections between terminals 2 and 7.
	6BA6	G	Same as 6CF6 to 6AU6.
	6BC5	G	No changes.
	6BD6	G	Same as 6CF6 to 6AU6.
	6CB6	E	Direct substitute.
	6CG6	G	Same as 6CF6 to 6AU6.
	5590	G	No changes.
	5591	G	
	5654	G	
	9001	P	
	9003	P	
6CH6	6AH6	P	Parallel circuits only. Change socket to 7 pin and rewire as follows: No. 2 to No. 1 3 to 7 4 to 3 5 to 4 7 to 5 8 to 6 9 to 2
6CK6	6CL6	G	Rewire as follows: Reverse Nos. 1 and 3 Reverse Nos. 6 and 7 Remove and tape up wires on Nos. 8 and 9.
6CL6	6AQ5	G	Change socket to 7 pin and rewire as follows: No. 2 & 9 to No. 1 & 7 1 & 7 to 2 4 to 3 5 to 4 6 to 5 3 & 8 to 6 In series circuits, shunt 20 ohm 2 watt resistor across Nos. 3 and 4.
	6BK5	G	Parallel circuits only. Rewire as follows: Reverse No. 1 and No. 6. No. 7 to No. 6 3 to 8 9 to 7 2 to 3

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6CL6	6BV7	G	Parallel circuits only. Rewire as follows: No. 8 to No. 3 2 & 9 to 8 6 to 2 If Nos. 1 and 7 are tied together, leave as is; if No. 7 is grounded and No. 1 goes through a bias network, remove the ground from No. 7 and move leads from No. 1 to No. 7.
	6BW6	P	Parallel circuits only. Rewire as follows: No. 9 to No. 2 3 to 8 1 to 3 7 to 9 6 to 7
	6BY7	G	Parallel circuits only. Rewire as follows: No. 9 to No. 2 7 to 9 6 to 7 3 to 8 Ground No. 6
	6CK6	G	Rewire as follows: Reverse No. 1 and No. 3 Reverse No. 6 and No. 7 No. 8 to No. 1 Ground No. 8
	6M5	G	Rewire as follows: No. 9 to No. 2 Remove wires from No. 3. No. 1 & 7 to No. 3 8 to 1 6 to 7 Connect wires removed from No. 3 to No. 1
6CS6	6BE6	G	No changes.
6CU6	6BQ6GT	E	No changes.
6J5	12AT7	G	This substitution utilizes both halves of the dual triode in parallel as the replacement tube. Same as 6J5 to 12AU7. In addition, connect Nos. 1 to 6, 2 to 7, and 3 to 8.
	12AU7	E	This substitution utilizes one half of the dual triode as the replacement tube. Change socket to noval and rewire as follows: Remove and tape up any wires connected to Nos. 1, 4 and 6. No. 2 to No. 4 & 5 3 to 1 5 to 2 7 to 9 8 to 3
	12AV7	G	Same as 6J5 to 12AU7. Parallel circuits only.
	12AX7	P	Same as 6J5 to 12AT7.
	12AZ7	G	Same as 6J5 to 12AU7. Parallel circuits only.
	12BH7	G	Same as 6J5 to 12AU7. Parallel circuits only.
6M5	6CL6	G	Reverse 6CL6 to 6M5 procedure.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6Q4	6AM4	G	Parallel circuits only. Rewire as follows: Remove and tape up any connections to No. 6. No. 8 to No. 6 5 to 8 9 to 5 7 to 9 4 to 7 2 to 4 3 to 2 Do not use No. 3 for tie point.
	6R4	G	Parallel circuits only. Rewire as follows: All connections to Nos. 1, 2, 7 and 8 must be moved to No. 1 No. 9 to No. 8
6R4	6Q4	G	Parallel circuits only. Rewire as follows: Remove and tape up any connections to Nos. 2, 7 and 9 No. 8 to No. 9
6S8GT	6R8	G	Parallel circuits only. Change socket to noval and rewire as follows: No. 1 on octal to No. 1 on noval 2 to 7 3 to 2 4 to 6 5 to 3 6 to 9 7 to 4 8 to 5 top cap to 8
	6V8	E	Parallel circuits only. Change socket to noval and rewire as follows: No. 1 on octal to No. 2 on noval 2 to 3 3 to 7 4 to 9 5 to 8 6 to 1 7 to 4 8 to 5 top cap to 6
6SN7	6BL7	E	Parallel circuits only. No changes.
	6BX7	E	
6T4	6AN4	G	No changes.
6T8	6AK8	G	No changes.
6U3	6V3	E	Parallel circuits only. Rewire as follows: No. 3 to top cap
6U8	6X8	G	Rewire as follows (only if Nos. 7 and 8 are tied together): No. 1 to No. 3 2 to 7 3 to 8 6 to 9 7 & 8 to 6 9 to 2 Connect Nos. 1 and 6 together

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
6V3	6U3	G	Parallel circuits only. Rewire as follows: (Be careful not to exceed the tube rating) top cap to No. 3
6V5GT	6V6GT	E	Rewire as follows: Remove and tape up any wires connected to No. 2. Connect Nos. 8 and 2 together.
6W6	6G6 6L6 5881	P	Parallel circuits only. No changes.
6X8	6U8	G	Rewire as follows: Connect Nos. 7 and 8 together. Nos. 1 & 6 to No. 8 2 to 9 3 to 1 7 to 2 8 to 3 9 to 6
12A4	12AU7	G	Rewire as follows: Remove and tape up any wires connected to Nos. 6 and 8. No. 1 to No. 3 & 8 3 to 9 9 to 1 & 6 Connect Nos. 2 and 7 together.
	12B4	G	No changes.
	12BH7	G	Same as 12A4 to 12AU7.
12AH8	6AJ8	G	This will work if the 12AH8 was operating on 6 volts. Rewire as follows: Remove jumper between Nos. 4 and 5. No. 9 to Nos. 4 or 5 (whichever has no connection) Connect Nos. 7 and 9 together.
12AK7	12AX7	E	No changes.
12AT6	6AQ6	E	Series circuits only. No changes.
12B4	12A4	G	No changes. For other substitutes see 12A4.
12BY7	6BY7	E	This can be used only where the 12BY7 is operating on 6.3 volts. Parallel circuits only. Rewire as follows: Remove wires from No. 4 to 5 then No. 6 to No. 4. Ground No. 6 (internal shield) If No. 3 is grounded, remove the connections from this point. If No. 9 is free, ground it or connect to No. 1.
12BZ7	12AX7	E	Parallel circuits only. No changes.
12S8	19T8	E	Same as 6S8 to 6T8.
	19V8	E	Same as 6S8 to 6V8.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
12SK7	12SS7	E	No changes, but in series circuits shunt 150 ohm 1 watt resistor across heater terminals, Nos. 2 and 7.
12SQ7	26BK6	G	Series circuits only. Same as 12SQ7 to 12BK6. Add 300 ohm 2 watt resistor across Nos. 3 and 4.
12SS7	12SK7	E	Make necessary circuit changes to provide additional heater current. See page 12, Section 1.
12V6	12A5	G	Change socket to small 7 pin and rewire as follows: ORIG. No. 2 on octal to No. 1 on 7 pin 3 to 2 4 to 3 5 to 4 7 to 7 8 to 5 SUB.
12X4	6X4	E	No changes, but add a 20 ohm 5 watt resistor in series with the heater.
	6X5	E	Same as 6X4 to 6X5, except to add a 20 ohm 5 watt resistor in series with the heater.
14X7	19T8	G	Series circuits only. Change socket to noval and rewire as follows: ORIG. No. 1 on loctal to No. 4 on noval 2 to 9 3 to 8 4 to 7 5 to 1 or/& 6 6 to 2 7 to 3 8 to 5 SUB.
	19V8	E	Series circuits only. Change socket to noval and rewire as follows: ORIG. No. 1 on loctal to No. 4 on noval 2 to 1 3 to 6 4 to 3 5 to 9 or /& 2 6 to 7 7 to 8 8 to 5 SUB.
19AQ5	16A5	G	Change socket to noval and rewire as follows: ORIG. No. 1 & 7 to No. 2 2 to 3 3 to 4 4 to 5 5 to 7 6 to 9 Nos. 6 and 8 are internal connections Do not use for tie points. SUB.
	35B5	G	Series circuits only. Some circuit changes may be necessary to provide the extra 15 filament volts. No other changes.
19J6	6J6	E	Rewire as follows: Disconnect heater terminals, Nos. 3 and 4. Connect these wires to a 125 ohm 3 watt resistor, which may be mounted out of the way. Use a 6 volt filament transformer to light the 6J6.
19X3	19Y3	E	No changes.
19Y3	19X3	E	No changes.

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
25BK5	12BY7	P	Rewire as follows: No. 1 to No. 7 3 & 7 to 2 6 to 1 & 3 or 9 No. 6 is heater tap. Do not use as tie point. Add 40 ohm 5 watt resistor in series with the filament.
	19AQ5	G	Change socket to 7 pin and rewire as follows: No. 1 to No. 5 3 & 7 to 1 & 7 4 to 3 5 to 4 6 to 2 8 to 6 Remove and tape up any wires connected to Nos. 2 and 9. In parallel circuits add a 40 ohm 2 watt resistor in series with one of the filament leads. In series circuits, shunt a 120 ohm 5 watt resistor across the filament leads.
	25L6GT	E	Change socket to octal and rewire as follows: No. 1 to No. 3 3 & 7 to 5 4 to 2 5 to 7 6 to 8 8 to 4 Connections anchored to Nos. 2 and 9 may be placed on the free terminals of the octal socket.
25L6	25BK5	E	Change socket to noval and rewire as follows: No. 2 on octal to No. 4 on noval 3 to 1 4 to 8 5 to 3 or 7 7 to 5 8 to 6
26A6	12BA6	G	No changes, except to add a 90 ohm 2 watt resistor in series with one heater lead.
26A7	12L8GT	G	No changes, except to add a 90 ohm 2 watt resistor in series with heater.
	28D7	G	Change socket to loctal and rewire as follows: No. 1 on octal to No. 7 on loctal 2 to 6 3 to 2 4 to 4 5 to 3 6 to 1 7 to 8 8 to 5
26CG6	26A6	G	No changes.
	12BA6	G	Same as 26A6 to 12BA6.
26D6	12BE6	G	No changes, except to add 90 ohm 2 watt resistor in series with heater. (Parallel circuits only)

TUBE	SUB.	PERF.	CIRCUIT CHANGES NECESSARY
28D7	26A7	G	Change socket to octal and rewire as follows: No. 1 on loctal to No. 6 on octal 2 to 3 3 to 5 4 to 4 5 to 8 6 to 2 7 to 1 8 to 7
28Z5	OZ4A/1003	G	This will work if the requirements for proper operation of the gas rectifier are met. Change socket to octal and rewire as follows: Remove and tapeup any wires connected to Nos. 1, 4 and 8. No. 3 on loctal to No. 3 on octal 6 to 5 7 to 8
50AX6G	6BY5	E	Rewire as follows: Remove wires from Nos. 2 and 7 and connect them to a 330 ohm 10 watt resistor. Remove and tape up any wires on No. 1. No. 4 to No. 1 3 to 4 The 6BY5 must be lit from a 6.3 volt 2.0 ampere filament transformer.
5590	6CF6	G	Parallel circuits only. No changes.
5591	6CF6	G	Parallel circuits only. No changes.
5670	6BK7	G	Parallel circuits only. Rewire as follows: Reverse No. 5 and No. 9 2 3 1 4

SUBSTITUTING PICTURE TUBES IN TV RECEIVERS

1. Connecting the External Conductive Tube Coating to Chassis

When a picture tube that does not have an external conductive coating is substituted for one that has the external coating, it is generally necessary to install a metal finger to make contact with the coating in order to connect it to the chassis. Sometimes this finger is attached to the deflection yoke support bracket. Ordinarily a tube that does not have an external coating has a 500-$\mu\mu$f capacitor connected from the anode lead to the chassis inside the high-voltage cage. It is normally not necessary to remove this capacitor when substituting a tube that has the external conductive coating.

2. Installing a Capacitor from the Anode Lead to the Chassis

When a tube that does not have the external conductive coating is substituted for one that has the external conductive coating, it is often necessary to install a capacitor from the anode lead to the chassis. In the substitutions listed here we have repeated the same value of 500 $\mu\mu$f. Ordinarily this will be satisfactory. In some cases this capacitor will not be necessary. In others best satisfaction may be had with capacitances as high as 2,000 $\mu\mu$f. This is according to individual cases and can be determined by trial. The most convenient location for this capacitor is inside the high-voltage cage.

3. Dimensions

Before attempting any of the substitutions listed here, make sure the substitute tube will fit into the available space. In the magnetic types try to choose a substitute with a neck length similar to the original. Differences in face plate curvatures may make it necessary, in some substitutions listed, to change the mask.

4. Change in Anode Connector

Either the ball-type or cavity-type anode connector is used on picture tubes. Instructions specify when a change is necessary.

5. Replacement or Deletion of Ion Trap

It is necessary to replace the ion trap with the type required by the manufacturer of the substitute tube. Some tubes do not require an ion trap and are being substituted for others requiring either a single or dual ion trap. In these cases,

the instruction is "Remove ion trap." Other tubes requiring a single ion trap can be substituted for by installing a dual ion trap and vice versa. In these cases instructions are given. Some manufacturers of picture tubes are using a new type gun requiring a single ion trap in tubes that formerly used a gun requiring a dual ion trap. It is therefore important to check the individual manufacturer's specification on the substitute tube being used.

6. Electrostatic and Self-Focus Tubes

When using electrostatic or self-focus tubes as substitutions for magnetically focused tubes, it is necessary to remove the focus coil from the neck of the tube and replace it with a magnetic centering device. The focus coil may be left in the receiver circuit-wise, in which case it should be mounted in the cabinet in some position where it magnetic field has no effect on the picture. It may be replaced with a choke or resistor. The picture tube socket may have to be changed when it is necessary to bring out a lead from the focus electrode on the picture tube base except in the case of self-focus or automatic focus types. This lead should be connected to a d-c voltage point in the set which gives best focus. The voltage required normally lies between 50 and 350 volts. Self-focus or automatic focus tubes have a special gun structure within the neck of the tube designed to focus the tube automatically without the use of an external focus voltage.

7. Substituting Electrostatic or Automatic Focus Types with Magnetic Types

When replacing electrostatic focus types with magnetic focus types, discard the magnetic centering device and install a permanent magnet focusing device. This must be mounted on the yoke support with suitable metal brackets. It is practical to replace an electrostatic focus tube using high-focus voltage with a type using low-focus voltage or a self-focus type. When doing this, it is desirable to remove the focus voltage rectifier as a safety measure.

8. Differences in the Face Plate

Differences in the face plate of the tube have little effect on whether or not they may be substituted. Dark-faced tubes give better contrast than white-faced tubes. Some tubes are frosted to decrease reflections and others have an aluminized back for better contrast and brightness. Aluminized tubes in some cases have higher anode voltage applied and this voltage should be reduced in accordance with manufacturers' specifications when other than aluminized tubes are substituted. When substituting aluminized tubes for white- or gray-faced tubes, sufficient voltage is usually available for satisfactory operation.

TUBE	SUB.	CHANGES NECESSARY
7HP4	7QP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to cavity type. Change ion trap to single.
7NP4	7WP4	Connect external conductive coating to chassis.
7QP4	7HP4	Change anode connector to ball type. Connect external conductive coating to chassis. Change ion trap to double.
7WP4	7NP4	No changes.
8AP4	8AP4A	No changes. Substitute has dark face.
8AP4A	8AP4	No changes. Substitute has white face.
10BP4	10BP4A	No changes. Substitute has dark face.
10BP4 10BP4A	10CP4	Change anode connector to cavity type. Remove ion trap.
	10EP4	Change anode connector to cavity type.
	10FP4A 10FP4	Remove ion trap.
10CP4	10BP4 10BP4A	Only where 1" greater length is available. Change anode connector to ball type.
	10EP4	Only where 1" greater length is available. Change anode connector from ball to cavity type. Remove ion trap.
	10FP4 10FP4A	Change anode connector to cavity type.
10EP4	10BP4 10BP4A	Change anode connector from ball to cavity type.
	10CP4	Remove ion trap.
	10FP4 10FP4A	Change anode connector from ball to cavity type. Remove ion trap.
10FP4	10FP4A	No changes.
10FP4 10FP4A	10BP4 10BP4A	Install double ion trap.
	10CP4	Change anode connector to ball type.
	10EP4	Change anode connector from cavity to ball type. Install double ion trap.
10MP4	10MP4A	No changes.
10MP4A	10MP4	No changes.

TUBE	SUB.	CHANGES NECESSARY
12JP4	12KP4 12KP4A	Connect external conductive coating to chassis. Change anode connector to cavity type.
12JP4	12LP4 12LP4A	Only where 1 1/8" greater length is available. Change anode connector to cavity type. Install double ion trap.
	12QP4 12QP4A	Install double ion trap.
	12RP4	Install single ion trap.
	12TP4	Only where 1 1/2" greater length is available. Change anode connector to cavity type. Install double ion trap.
	12VP4 12VP4A	Change anode connector to cavity type. Install double ion trap.
	12YP4	Only where 1" greater length is available. Change anode connector to cavity. Install single ion trap. Substitute is electrostatic focus. See No. 6 in picture tube article.
12KP4	12KP4A	No changes. Substitute has dark face.
12KP4 12KP4A	12JP4	Change anode connector to cavity type.
	12QP4 12QP4A 12RP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to ball. Install single ion trap.
	12TP4	Only where 1 1/2" greater length is available. Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Install double ion trap.
	12VP4 12VP4A	Install double ion trap.
	12YP4	Only where 1 1/2" greater length is available. Install single ion trap. Substitute is electrostatic focus. See No. 6 in picture tube article.
12LP4	12LP4A	No changes. Substitute has dark face.
12LP4 12LP4A	12JP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to ball type. Remove ion trap.
	12KP4 12KP4A	Remove ion trap.
	12QP4 12QP4A 12RP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to ball type. Change ion trap to single.
	12VP4 12VP4A 12TP4	No changes.
	12YP4	Change ion trap to single. Substitute is electrostatic focus. See No. 6 in picture tube article.
12QP4	12QP4A	No changes. Substitute has dark face.
12QP4 12QP4A	12JP4	Remove ion trap.
	12KP4 12KP4A	Connect external conductive coating to chassis. Change anode connector to cavity type. Remove ion trap.

TUBE	SUB.	CHANGES NECESSARY
12QP4 12QP4A	12LP4 12LP4A	Only where 1 1/2" greater length is available. Connect external conductive coating to chassis. Change anode connector to cavity type. Install ion trap.
	12RP4	No changes.
	12TP4	Only where 1 1/2" greater length is available. Change anode connector to cavity type. Change ion trap to double.
	12VP4 12VP4A	Connect external conductive tube coating to chassis. Only where 1" greater length is available. Change anode connector to cavity type. Change ion trap to double.
	12YP4	Only where 1 1/2" greater length is available. Connect external tube coating to chassis. Change anode connector to cavity type. Substitute is electrostatic focus. See No. 6 in picture tube article.
12RP4	12JP4	Remove ion trap.
	12KP4 12KP4A	Connect external conductive tube coating to chassis. Change anode connector to cavity type. Remove ion trap.
	12LP4 12LP4A	Only where 1 1/2" greater length is available. Connect external conductive tube coating to chassis. Change anode connector to cavity type. Change ion trap to double.
	12QP4 12QP4A	No changes.
	12TP4	Only where 1 1/2" greater length is available. Change anode connector to cavity type. Change ion trap to double.
	12VP4 12VP4A	Only where 1 1/2" greater length is available. Connect external conductive coating to chassis. Change anode connector to cavity type. Change ion trap to double.
	12YP4	Only where 1 1/2" greater length is available. Change anode connector to cavity type. Substitute is electrostatic focus. See No. 6 in picture tube article.
12TP4	12JP4	Change anode connector to ball type. Remove ion trap.
	12KP4 12KP4A	Connect external conductive tube coating to chassis. Remove ion trap.
	12QP4 12QP4A	Change anode connector to ball type. Change ion trap to single.
	12RP4	
	12VP4 12VP4A	Connect external conductive tube coating to chassis.
	12YP4	Connect external conductive tube coating to chassis. Change ion trap to single. Substitute is electrostatic focus. See No. 6 in picture tube article.
12UP4	12UP4A	No changes. Substitute has dark face.
12UP4 12UP4A	12UP4B	Change to single ion trap.
12UP4B	12UP4 12UP4A	Change to double ion trap.
12VP4	12VP4A	No changes. Substitute has dark face.

TUBE	SUB.	CHANGES NECESSARY
14BP4	14BP4A	No changes.
14BP4 14BP4A	14EP4 14CP4	No changes.
	14DP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
	14FP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
14CP4	14BP4 14BP4A 14EP4	No changes.
	14DP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
	14FP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
14DP4	14BP4 14BP4A 14CP4 14EP4	Connect external conductive coating to chassis. Change ion trap to single.
	14FP4	Change ion trap to single.
14EP4	14BP4 14BP4A 14CP4	No changes.
	14DP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
	14FP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
14FP4	14BP4 14BP4A 14CP4 14EP4	Connect external conductive coating to chassis.
	14DP4	Change ion trap to double.
15AP4	15CP4	Only where 1" greater length is available. Change anode connector to cavity type. Install double ion trap.
	15DP4	Change ion trap to single.
	16CP4	Only where 1" greater length is available. Change anode connector to cavity type. Install double ion trap.
	16LP4 16LP4A 16ZP4	Only where 2" greater length is available. Connect external conductive coating to chassis. Install double ion trap.
15CP4	15AP4	Change ion connector to ball type. Remove ion trap.
	15DP4	Change ion connector to ball type. Change ion trap to single.
	16CP4	No changes.
	16LP4 16LP4A 16ZP4	Only where 1" greater length is available. Connect external conductive tube coating to chassis.

TUBE	SUB.	CHANGES NECESSARY
15DP4	15AP4	Install single ion trap.
	15CP4 16CP4	Only where 1" greater length is available. Change anode connector to cavity type. Change ion trap to double.
	16LP4 16LP4A 16ZP4	Only where 2" greater length is available. Connect external conductive tube coating to chassis. Change anode connector to cavity type. Change ion trap to double.
16AP4	16AP4A	No changes.
16AP4A	16AP4	No changes.
16AP4 16AP4A	16AP4B	No changes.
16CP4	15AP4	Change anode connector to ball type. Remove ion trap.
	15CP4	No changes.
	15DP4	Change anode connector to ball type. Change ion trap to single.
	16LP4 16LP4A 16ZP4	Only where 1" greater length is available. Connect external conductive tube coating to chassis.
16DP4	16DP4A	No changes.
16DP4 16DP4A	16FP4	Change anode connector to ball type. Change ion trap to single.
	16HP4 16HP4A 16JP4 16JP4A	Connect external conductive tube coating to chassis.
	16MP4 16MP4A	Connect external conductive tube coating to chassis.
16EP4	16EP4A 16EP4B	No changes.
16EP4 16EP4A 16EP4B	16AP4 16AP4A 16AP4B	Only where 2-5/8" additional length is available. Change ion trap to double.
16FP4	16HP4 16HP4A 16JP4 16JP4A	Only where 1" greater length is available. Connect external conductive tube coating to chassis. Change anode connector to cavity type. Change ion trap to double.
	16MP4 16MP4A	Only where 2" greater length is available. Connect external conductive tube coating to chassis. Change anode connector to cavity type. Change ion trap to double.
16GP4	16GP4A 16GP4B	No changes.
16HP4	16HP4A	No changes.
16HP4 16HP4A	16JP4 16JP4A	No changes.
	16MP4 16MP4A	Only where 1" greater length is available. No changes.
16JP4	16JP4A	No changes.
16JP4 16JP4A	16DP4 16DP4A	Connect 500-$\mu\mu$f, 20 kv capacitor from anode to chassis.
	16FP4 16FP4A	Change anode connector to ball type. Change ion trap to single.

TUBE	SUB.	CHANGES NECESSARY
16JP4 16JP4A	16HP4 16HP4A	No changes.
	16MP4	Only where 1" greater length is available.
	16MP4A	No changes.
16KP4	16KP4A	No changes.
16KP4 16KP4A	16QP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
	16RP4	No changes.
	16TP4	No changes.
	16UP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16XP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
16LP4	16LP4A	No changes. Substitute has dark face.
16LP4 16LP4A	15AP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to ball type. Remove ion trap.
	15CP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	15DP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change anode connector to ball type. Change ion trap to single.
	16CP4	Connect 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16ZP4	No changes.
16MP4	16MP4A	No changes.
16MP4 16MP4A		Same as 16JP4 substitutes.
16QP4	16KP4 16KP4A	Connect external conductive tube coating to chassis. Change ion trap to single.
	16RP4	Connect external conductive tube coating to chassis. Change ion trap to single.
	16TP4	Connect external conductive tube coating to chassis. Change ion trap to single.
	16UP4	Change ion trap to single.
	16XP4	No changes.
16RP4	16KP4 16KP4A	No changes.
	16QP4	Change ion trap to double.
	16TP4	No changes.
	16UP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16XP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.

TUBE	SUB.	CHANGES NECESSARY
16SP4	16SP4A	No changes.
16SP4A	16SP4	No changes.
16SP4 16SP4A	16VP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to ground. Change ion trap to single.
	16WP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16YP4	Change ion trap to single.
	16WP4A	No changes.
16TP4	16KP4 16KP4A	Only where 1" greater length is available. No changes.
	16QP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
	16RP4	Only where 1" greater length is available. No changes.
	16UP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16XP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
16UP4	16KP4 16KP4A	Connect external conductive tube coating to chassis.
	16QP4	Change ion trap to double.
	16RP4	Connect external conductive tube coating to chassis.
	16TP4	Connect external conductive tube coating to chassis.
	16XP4	Change ion trap to double.
16VP4	16SP4 16SP4A	Connect external conductive tube coating to chassis. Change ion trap to double.
	16WP4	Change ion trap to double.
	16WP4A	Connect external conductive tube coating to chassis. Change ion trap to double.
	16YP4	Connect external conductive tube coating to chassis.
16WP4	16SP4 16SP4A	Connect external conductive tube coating to chassis.
	16VP4	Change ion trap to single.
	16WP4A	Connect external conductive tube coating to chassis.
	16YP4	Connect external conductive tube coating to chassis. Change ion trap to single.
16WP4A	16SP4 16SP4A	No changes.
	16VP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to single.
	16WP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16YP4	Change ion trap to single.

TUBE	SUB.	CHANGES NECESSARY
16XP4	16KP4 16KP4A	Connect external conductive tube coating to chassis. Change ion trap to double.
	16QP4	No changes.
	16RP4	Connect external conductive tube coating to chassis. Change ion trap to single.
	16TP4	Connect external conductive tube coating to chassis. Change ion trap to single.
	16UP4	Change ion trap to single.
	16WP4A	Change ion trap to double.
16YP4	16SP4 16SP4A	Change ion trap to double.
	16VP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	16WP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis. Change ion trap to double.
16ZP4		Same as 16LP4 substitutes.
17AP4	17BP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	17BP4A 17BP4B 17BP4C	No changes.
	17JP4	No changes.
	17KP4	Substitute type is self-focus electrostatic. See No. 6 in picture tube article.
17BP4	17AP4	Connect external conductive tube coating to chassis.
	17BP4A 17BP4B 17BP4C	Connect external conductive tube coating to chassis.
	17JP4	Connect external conductive tube coating to chassis.
	17KP4	Substitute type is self-focus electrostatic. See No. 6 in picture tube article.
17BP4A	17BP4B 17BP4C	No changes.
17BP4A 17BP4B 17BP4C	17AP4	No changes.
	17BP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	17JP4	No changes.
	17KP4	Substitute type is self-focus electrostatic. See No. 6 in picture tube article.
17CP4	17CP4A	No changes.
17CP4A	17CP4	No changes.

TUBE	SUB.	CHANGES NECESSARY
17FP4	17FP4A	No changes.
17FP4A	17FP4	No changes.
17FP4 17FP4A	17KP4	No changes. Focus voltage rectifier may be removed as a safety measure.
17HP4	17HP4A	No changes.
17HP4A	17HP4	No changes.
17HP4 17HP4A	17KP4	No changes.
	17RP4	No changes.
17JP4	17AP4	No changes.
	17BP4	Install 500-$\mu\mu$f, 20-kv capacitor from anode to chassis.
	17BP4A 17BP4B 17BP4C	No changes.
	17KP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
17KP4	17HP4 17HP4A	Original type is self-focus. Substitute is external control electrostatic focus. See No. 6 in picture tube article.
	17BP4 17BP4A	Original type is self-focus. Substitute is magnetic focus. See No. 7 in picture tube article.
17LP4	17LP4A	No changes.
17LP4 17LP4A	17SP4	No changes.
	17VP4	No changes.
17QP4	17SP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
	17UP4	No changes.
17RP4	17HP4 17HP4A	No changes.
	17KP4	No changes.
17SP4	17LP4 17LP4A	Substitute is external control electrostatic. See No. 6 in picture tube article.
17UP4	17QP4	No changes.
17UP4	17SP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
17VP4	17LP4 17LP4A	No changes.
	17SP4	No changes.

TUBE	SUB.	CHANGES NECESSARY
19AP4	19AP4A	No changes. Substitute has gray face.
	19AP4B	No changes. Substitute has gray frosted face.
	19AP4C	No changes. Substitute has gray aluminum face.
	19AP4D	No changes. Substitute has clear frosted face.
19AP4A 19AP4B 19AP4C 19AP4D		Refer to above.
19DP4	19DP4A	No changes. Substitute has gray face.
19DP4A	19DP4	No changes. Substitute has clear face.
19DP4 19DP4A	19FP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	19GP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis. Change ion trap to single.
19EP4	19JP4	No changes.
19FP4	19DP4 19DP4A	Connect external conductive tube coating to chassis.
	19GP4	Change ion trap to single.
19GP4	19DP4 19DP4A	Connect external conductive tube coating to chassis. Change ion trap to double.
	19FP4	Change ion trap to double.
19JP4	19EP4	No changes.
20CP4	20CP4A	No changes.
	20CP4C	No changes. Substitute has treated face.
	20DP4	No changes.
	20DP4A	Connect external conductive tube coating to chassis.
	20JP4	Connect external conductive tube coating to chassis. Substitute is self-focus electrostatic. See No. 6 in picture tube article.
20CP4A	20CP4	Connect external conductive tube coating to chassis.
	20CP4C	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20DP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20DP4A	No changes.
	20JP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
20CP4C	20CP4	No changes. Substitute has treated face.
	20CP4A	Connect external conductive tube coating to chassis.
	20DP4	No changes.

TUBE	SUB.	CHANGES NECESSARY
20CP4C	20DP4A	Connect external conductive tube coating to chassis.
	20JP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
20DP4	20CP4 20CP4C	No changes.
	20DP4A	Connect external conductive tube coating to chassis.
	20CP4A	Connect external conductive tube coating to chassis.
	20JP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
20DP4A	20CP4 20CP4C	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20DP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20JP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
20FP4	20GP4	Connect external conductive tube coating to chassis.
	20JP4	No changes. Focus voltage rectifier may be removed as a safety measure.
20GP4	20FP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20JP4	No changes. Focus voltage rectifier may be removed as a safety measure.
20HP4	20HP4B	No changes. Substitute has treated face.
20HP4 20HP4B	20HP4A	Connect external conductive tube coating to chassis.
	20JP4	Connect external conductive tube coating to chassis.
	20LP4	Connect external conductive tube coating to chassis.
21EP4	21EP4A 21EP4B	Connect external conductive tube coating to chassis.
	21KP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
	21KP4A	Connect external conductive tube coating to chassis. Substitute is self-focus electrostatic. See No. 6 in picture tube article.
21EP4A	21EP4B	No changes. Substitute is aluminized.
21EP4A 21EP4B	21KP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
	21EP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	21KP4A	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
21FP4	21FP4A	Connect external conductive tube coating to chassis.
	21KP4	No changes.
	21KP4A	Connect external conductive tube coating to chassis.

TUBE	SUB.	CHANGES NECESSARY
21FP4A	21FP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	21KP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	21KP4A	No changes.
21KP4	21KP4A	Connect external conductive tube coating to chassis.
21KP4A	21KP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
21WP4	20CP4 20CP4C	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20CP4A	No changes.
	20DP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
	20DP4A	No changes.
	20JP4	Substitute is self-focus electrostatic. See No. 6 in picture tube article.
21ZP4	21ZP4A	Connect external conductive tube coating to chassis.
21ZP4A	21ZP4	Install 500-$\mu\mu$f, 25-kv capacitor from anode to chassis.
22AP4	22AP4A	No changes.
22AP4A	22AP4	No changes.
24AP4	24AP4A 24AP4B	No changes.
24AP4B	24AP4 24AP4A	No changes.
27EP4	27GP4	No changes.
	27NP4	No changes.
	27RP4	No changes.
27GP4	27EP4	No changes.
	27NP4	Connect external conductive tube coating to chassis.
	27RP4	Connect external conductive tube coating to chassis.
27NP4	27EP4	No changes.
	27GP4	No changes.
	27RP4	No changes.
27RP4	27EP4	No changes.
	27GP4	No changes.
	27NP4	No changes.

CUMULATIVE INDEX

The following index contains all the tubes listed in the RECEIVING TUBE SUBSTITUTION GUIDEBOOK, including those given in the First and Second Supplements, for which substitutions are given. Where (0) precedes the page number, the substitution information is given on the page referred to in the original RECEIVING TUBE SUBSTITUTION GUIDEBOOK; where (1) precedes the page number, the substitution information is given on the page referred to in the First Supplement; and where (2) precedes the page number, the substitution information is given on the page referred to in the Second Supplement.

RECEIVING TUBES

TUBE	PAGE
00A	(0)33
01A	(0)33
0A2	(0)33
0A3	(0)33
	(1)13
0A4	(0)33
0B2	(0)33
0B3	(0)33
0C3	(0)33
0D3	(0)33
0Y4	(0)33
0Y4G	(0)33
0Z4	(0)33
	(1)13, 14
0Z4A	(0)33
1A3	(0)33
1A4	(0)33
	(1)14
1A4	(0)34
1A5	(0)34
	(1)14
1A6	(0)34
1A7	(0)34
	(1)14
1A7	(0)35
1AB5	(0)35
1AC5	(0)35
1AD4	(0)35
1AD5	(0)35, 36
1AE4	(0)36
	(1)14
1AF4	(0)36
1AF5	(0)36
	(1)14
1B3	(0)36
	(1)14, 15
	(2)1
1B4	(0)36
1B5	(0)36
1B7	(0)36, 37
1B8	(0)37
1C3	(0)37
1C5	(0)37
	(1)15
1C6	(0)37
1C7	(0)37
1C8	(0)37
1C21	(0)37
1D5	(0)38
1D5GT	(2) 1
1D7	(0)38
1D8	(0)38
1E4	(0)38
1E5	(0)38
1E7	(0)38
1E8	(0)38
1F4	(0)38
	(1)15
1F5	(0)38
	(1)15
1F6	(0)38
1F7	(0)39
1G4	(0)39
1G5	(0)39
	(1)15
1G6	(0)39
	(1)15

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
1H4	(0)39
	(1)15
1H5	(0)39
	(1)15
1H6	(0)39
1J5	(0)39
	(1)16
1J6	(0)39
	(1)16
1L4	(0)39
	(1)16
1L6	(0)40
	(1)16
1LA4	(0)40
	(1)16
1LA6	(0)40, 41
1LB4	(0)41
	(1)16
1LB6	(0)41
1LC5	(0)41, 42
1LC6	(0)42
1LD5	(0)42, 43
1LE3	(0)43
	(1)16, 17
1LG5	(0)43
	(1)17
1LH4	(0)43
	(1)17, 18
1LN5	(0)43, 44
	(1)18
1N5	(0)44
	(1)18
1N6	(0)44, 45
1P5	(0)45
	(1)18
1Q5	(0)45
	(1)18
1Q6	(0)45
1R4/1294	(0)45
1R5	(0)45
1S4	(0)46
	(1)18, 19
1S5	(0)46
	(1)19
1S6	(0)46
1SA6	(0)46
	(1)19
1SB6	(0)46
1T4	(0)46, 47
	(1)19
1T5	(0)47
	(1)19
1T6	(0)47
1U4	(0)47
	(1)19
1U5	(0)47
1U6	(0)47
1V	(0)47
	(1)19
1V2	(0)47
1V5	(0)47
1W4	(0)48
	(1)19
1W5	(0)48
1X2	(0)48
	(1)19, 20
	(2)1
1X2A	(1)20
	(2) 1
1Y2	(1)20
1Z2	(0)48
	(1)20
2A3	(0)48
	(1)20
2A4G	(0)48
2A5	(0)48
2A6	(0)48
2A7	(0)48
2B7S	(0)49
2B25	(0)49
2C4	(0)49
2C21	(0)49
2C22	(0)49
2C51	(0)49
2C52	(0)49
2D21	(0)49
2E5	(0)49
2E26	(0)49
2E30	(0)49
2E31	(0)49
2E32	(0)49

STARK RADIO SUPPLY CO.

17 North 2nd Avenue East — Duluth, Minn.
Phone: 2-7827
Distributors to the Radio Trade

CUSTOMERS ORDER No. _____ DATE 12/8/ 1954

M Bill Lounsberry

ADDRESS _____

QUAN.	DESCRIPTION	PRICE	AMOUNT
1	#2 Supplement Rider.		.99

POSTAGE & G.D.C.
CARRIED FORWARD
TOTAL

Cash Sale Invoice

Nº 18076

GUIDE

TUBE	PAGE
Y3	(0) 55 (2) 1
Y4	(0) 55 (2) 1
Z3	(0) 55 (2) 1
Z4	(0) 56 (2) 1
A3	(0) 56
A4	(0) 56
A4/LA	(0) 56
A5	(0) 56
A6	(0) 56 (1) 21
A7	(0) 56, 57 (1) 21
A8	(0) 57 (1) 21, 22
AB4	(0) 57, 58 (2) 1
AB5/6N5	(0) 58
AB6	(0) 58
AB7/1853	(0) 58
AC5G	(0) 58
AC5GT	(0) 59
AC6	(0) 59
AC7	(0) 59
AC7/1852	(0) 59
AD4	(0) 59
AD5	(0) 59

3D6/1299	(0) 51	5X3	(0) 54
3E5	(0) 51	5X4	(0) 54 (2) 1
3E6	(0) 51		

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
1H4	(0)39 (1)15
1H5	(0)39 (1)15
1H6	(0)39
1J5	(0)39 (1)16
1J6	(0)39 (1)16
1L4	(0)39 (1)16
1L6	(0)40 (1)16
1LA4	(0)40 (1)16
1LA6	(0)40, 41
1LB4	(0)41 (1)16
1LB6	(0)41
1LC5	(0)41, 42
1LC6	(0)42
1LD5	(0)42, 43
1LE3	(0)43 (1)16, 17
1LG5	(0)43 (1)17
1LH4	(0)43 (1)17, 18
1LN5	(0)43, 44 (1)18
1N5	(0)44 (1)18
1N6	(0)44, 45
1P5	(0)45 (1)18
1Q5	(0)45 (1)18
1Q6	(0)45
1R4/1294	(0)45
1R5	(0)45
1S4	(0)46 (1)18, 19
1S5	(0)46 (1)19
1S6	(0)46
1SA6	(0)46 (1)19
1SB6	(0)46
1T4	(0)46, 47 (1)19
1T5	(0)47 (1)19
1T6	(0)47
1U4	(0)47 (1)19
1U5	(0)47
1U6	(0)47
1V	(0)47 (1)19
1V2	(0)47
1V5	(0)47
1W4	(0)48 (1)19
1W5	(0)48
1X2	(0)48 (1)19, 20 (2)1
1X2A	(1)20 (2) 1
1Y2	(1)20
1Z2	(0)48 (1)20
2A3	(0)48 (1)20
2A4G	(0)48
2A5	(0)48
2A6	(0)48
2A7	(0)48
2B7S	(0)49
2B25	(0)49
2C4	(0)49
2C21	(0)49
2C22	(0)49
2C51	(0)49
2C52	(0)49
2D21	(0)49
2E5	(0)49
2E26	(0)49
2E30	(0)49
2E31	(0)49
2E32	(0)49

STARK RADIO SUPPLY CO.

17 North 2nd Avenue East — Duluth, Minn.

Phone: 2-7827

Distributors to the Radio Trade

CUSTOMERS ORDER No. _____

DATE 12/8/1 195_

M _____

ADDRESS Bill Lounsberry

QUAN.	DESCRIPTION	PRICE	AMOUNT
1	#2 Supplement Riders.		.99

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
2E35	(0)49
2E36	(0)49
2E41	(0)49
2E42	(0)49
2G5	(0)49
2G21	(0)50
2G22	(0)50
2S/4S	(0)50
2V3	(0)50
2W3	(0)50
2X2/879	(0)50
2Y2	(0)50
2Z2/G84	(0)50
3A4	(0)50
3A5	(0)50
3A8GT	(0)50
3B4	(0)50
3B5	(0)50, 51 (1)20
3B7	(0)51
3B7/1291	(0)51
3C5	(0)51
3C6	(0)51
3D6/1299	(0)51
3E5	(0)51
3E6	(0)51
3LE4	(0)52 (1)21
3LF4	(0)52 (1)21
3Q4	(0)52
3Q5	(0)52
3Q5	(0)53
3S4	(0)53
3V4	(0)53
4A6	(0)53
5A6	(0)53
5AW4	(2) 1
5AX4	(0)53
5AZ4	(0)53 (2) 1
5R4GY	(0)53 (2) 1
5T4	(0)53 (2) 1
5T4	(0)54 (2) 1
5U4	(0)54 (2) 1
5V4	(0)54 (2) 1
5W4	(0)54 (2) 1
5X3	(0)54
5X4	(0)54 (2) 1
5Y3	(0)55 (2) 1
5Y4	(0)55 (2) 1
5Z3	(0)55 (2) 1
5Z4	(0)56 (2) 1
6A3	(0)56
6A4	(0)56
6A4/LA	(0)56
6A5	(0)56
6A6	(0)56 (1)21
6A7	(0)56, 57 (1)21
6A8	(0)57 (1)21, 22
6AB4	(0)57, 58 (2) 1
6AB5/6N5	(0)58
6AB6	(0)58
6AB7/1853	(0)58
6AC5G	(0)58
6AC5GT	(0)59
6AC6	(0)59
6AC7	(0)59
6AC7/1852	(0)59
6AD4	(0)59
6AD5	(0)59

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
6AD6	(0) 59
6AD7	(0) 60 (1) 22
6AE5	(0) 60 (1) 22
6AE6	(0) 60
6AF4	(2) 1
6AF5	(0) 60 (1) 22
6AF6	(0) 60
6AF7	(0) 60
6AG5	(0) 60 (1) 22 (2) 1
6AG6G	(0) 60
6AG7	(0) 60
6AH4	(2) 2
6AH5	(0) 61
6AH6	(0) 61, 143 (2) 2
6AH7	(0) 61
6AJ4	(2) 2
6AJ5	(0) 61 (2) 2
6AJ7	(0) 62
6AJ8	(2) 2
6AK5	(0) 62 (1) 22 (2) 2
6AK6	(0) 62 (2) 3
6AK7	(0) 62
6AK8	(2) 3
6AL5	(0) 62 (1) 23
6AL6	(0) 62 (1) 23
6AL7	(0) 62
6AM4	(2) 3
6AM5	(0) 62 (2) 3
6AM6	(0) 62, 63
6AN4	(2) 3
6AN5	(0) 63
6AN6	(0) 63
6AN7	(0) 63
6AQ5	(0) 63 (1) 23 (2) 3
6AQ6	(0) 63 (1) 23
6AQ7	(0) 63
6AR5	(0) 64
6AR6	(0) 64 (1) 23
6AR7	(0) 64
6AS5	(0) 64 (2) 3
6AS6	(0) 64
6AS7G	(0) 64
6AT6	(0) 64, 65
6AU5	(0) 65 (1) 23
6AU6	(0) 65, 143 (1) 24
6AV5	(0) 65
6AV6	(0) 65 (2) 3
6AW7	(0) 65
6AX4	(1) 24
6AX5	(0) 65
6AX6	(0) 65, 66
6B4	(0) 66
6B5	(0) 66
6B6	(0) 66
6B7	(0) 67
6B8	(0) 67
6BA5	(0) 67
6BA6	(0) 67 (1) 24 (2) 3
6BA7	(0) 67
6BC5	(0) 67 (1) 24 (2) 3
6BC7	(0) 68
6BD5	(0) 68
6BD6	(0) 68
6BD7	(0) 68

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
6BE6	(0) 68
6BF5	(0) 68
6BF6	(0) 68
6BF7	(0) 68
6BG6	(0) 68 (1) 24
6BG7	(0) 68
6BH6	(0) 68 (1) 24
6BJ6	(0) 68, 69 (2) 3
6BK5	(2) 4
6BK6	(0) 69
6BK7	(2) 4
6BL7	(1) 24 (2) 4
6BM5	(2) 4
6BN6	(0) 69
6BN7	(1) 24
6BQ6	(0) 69 (2) 4
6BQ7	(1) 24 (2) 4
6BT6	(0) 69 (2) 4
6BU6	(0) 69
6BW6	(2) 4
6BX6	(2) 4
6BX7	(2) 4
6BY5	(0) 69 (2) 4
6BY7	(2) 5
6BZ7	(2) 5
6C4	(0) 69, 70 (2) 5
6C5	(0) 70 (1) 24 (2) 5
6C6	(0) 70, 71, 143
6C7	(0) 71
6C8	(0) 71, 72
6CB6	(0) 72 (1) 25 (2) 5
6CD6	(0) 72 (1) 25
6CF6	(2) 6
6CG6	(1) 25 (2) 5, 6
6CH6	(2) 6
6CK6	(2) 6
6CL6	(2) 6, 7
6CS6	(2) 7
6CU6	(2) 7
6D4	(0) 72
6D6	(0) 72
6D7	(0) 72
6D8	(0) 72
6E5	(0) 73
6E6	(0) 73 (1) 25
6E7	(0) 73
6E8	(0) 73
6F4	(0) 73
6F5	(0) 73, 74
6F6	(0) 74, 143 (1) 25
6F7	(0) 74 (1) 25
6F8	(0) 74 (1) 25
6G5	(0) 75
6G6	(0) 75
6H4	(0) 75
6H5	(0) 75
6H6	(0) 75
6H8	(0) 75
6J4	(0) 75, 76
6J5	(0) 76 (1) 25 (2) 7
6J6	(0) 76 (1) 26
6J7	(0) 76, 77, 143
6J8	(0) 77, 78 (1) 26

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
6K4	(0) 78
6K5	(0) 78
6K6	(0) 78, 79 (1) 26
6K7	(0) 79, 80
6K8	(0) 80 (1) 26
6L4	(0) 80
6L5	(0) 80 (1) 26
6L6	(0) 80, 81 (1) 26, 27
6L7	(0) 81
6M5	(0) 81 (2) 7
6M6G	(0) 81
6M7G	(0) 81
6M8GT	(0) 81
6N4	(0) 81
6N5	(0) 81
6N6	(0) 81
6N7	(0) 81, 82
6N8	(0) 82
6P5	(0) 82 (1) 27
6P7	(0) 82 (1) 27
6P8G	(0) 82
6Q4	(2) 8
6Q5G	(0) 82
6Q6	(0) 82
6Q7	(0) 82, 83 (1) 27
6R4	(0) 83 (2) 8
6R6	(0) 83
6R7	(0) 83 (1) 27
6R8	(0) 83 (1) 27
6S4	(1) 27
6S6	(0) 84
6SA7	(0) 84 (1) 28
6S7	(0) 84
6S8	(1) 27
6S8GT	(2) 8
6SB7Y	(0) 84 (1) 28
6SC7	(0) 84, 85 (1) 28
6SD7	(0) 85
6SE7	(0) 85
6SF5	(0) 85, 86
6SF7	(0) 86
6SG7	(0) 86 (1) 28
6SH7	(0) 86 (1) 29
6SJ7	(0) 86, 87 (1) 29
6SK7	(0) 87, 88 (1) 29
6SL7	(0) 88 (1) 29
6SN7	(0) 88, 89 (1) 29 (2) 8
6SQ7	(0) 89, 90 (1) 29
6SR7	(0) 90 (1) 30
6SS7	(0) 90
6ST7	(0) 91
6SU7	(0) 91
6SV7	(0) 91
6SZ7	(0) 91
6T4	(2) 8
6T5	(0) 91
6T6	(0) 91
6T7	(0) 91
6T8	(0) 91, 143 (1) 30 (2) 8
6U3	(2) 8
6U4	(0) 91 (1) 30
6U5/6G5	(0) 91 (1) 30
6U6	(0) 91, 92 (1) 30
6U7	(0) 92
6U8	(1) 30 (2) 8

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
6V3	(2) 9
6V4	(0) 92
6V5GT	(2) 9
6V6	(0) 92, 93 (1) 30
6V7	(0) 93
6V8	(0) 30, 31
6W4	(0) 93 (1) 31
6W5	(0) 93
6W6	(0) 93 (1) 31 (2) 9
6W7	(0) 93, 94
6X4	(0) 94
6X5	(0) 94, 95
6X6G	(0) 95
6X8	(1) 31 (2) 9
6Y3G	(0) 95
6Y5	(0) 95
6Y6	(0) 95
6Y7	(0) 96
6Y7G	(0) 144
6Z3	(0) 96
6Z4	(0) 96
6Z5	(0) 96
6Z7	(0) 96
6ZY5	(0) 96
7A4	(0) 97 (1) 31
7A5	(0) 97
7A6	(0) 97
7A7	(0) 97, 98 (1) 31, 32
7A8	(0) 98 (1) 32
7AB7	(0) 98, 99
7AD7	(0) 99
7AF7	(0) 99 (1) 32
7AG7	(0) 99
7AH7	(0) 99
7AJ7	(0) 99
7AK7	(0) 99
7B4	(0) 100 (1) 32
7B5	(0) 100 (1) 32
7B6	(0) 100 (1) 32
7B7	(0) 100, 101 (1) 32
7B8	(0) 101 (1) 32
7C4	(0) 101
7C5	(0) 102 (1) 32
7C6	(0) 102 (1) 33
7C7	(0) 102, 103 (1) 33
7D7	(0) 103
7E5	(0) 103
7E6	(0) 103 (1) 33
7E7	(0) 103
7F7	(0) 103
7F8	(0) 104 (1) 33
7G7	(0) 104
7G7/1232	(0) 104
7G8	(1) 33
7H7	(0) 104
7J7	(0) 104 (1) 33
7K7	(0) 105
7L7	(0) 105
7N7	(0) 105 (1) 33, 34
7Q7	(0) 105 (1) 34
7R7	(0) 105 (1) 34
7S7	(0) 105 (1) 34
7T7	(0) 105, 106
7V7	(0) 106
7W7	(0) 106
7X6	(0) 106

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
7X7	(0) 106
7Y4	(0) 106 (1) 34
7Z4	(0) 106 (1) 34
10	(0) 106
10Y	(0) 106
12A	(0) 106
12A4	(2) 9
12A5	(0) 107
12A6	(0) 107 (1) 34
12A8	(0) 107 (1) 35
12AH7	(0) 107 (1) 35
12AH8	(2) 9
12AK7	(2) 9
12AL5	(0) 107
12AT6	(0) 108 (1) 35 (2) 9
12AT7	(0) 108, 143 (1) 35
12AU6	(0) 108
12AU7	(0) 108 (1) 35
12AV6	(0) 108
12AV7	(0) 108 (1) 35
12AW6	(0) 108 (1) 35
12AX4	(1) 36
12AX7	(0) 108 (1) 36
12AY7	(0) 108, 109 (1) 36
12AZ7	(1) 36
12B4	(2) 9
12B6M	(0) 109
12B7	(0) 109
12B8GT	(0) 109
12BA6	(0) 109 (1) 36
12BA7	(0) 109
12BD6	(0) 109
12BE6	(0) 109
12BF6	(0) 109
12BH7	(0) 109 (1) 36
12BK6	(0) 109
12BN6	(1) 36
12BT6	(0) 109
12BU6	(0) 110
12BY7	(2) 9
12BZ7	(2) 9
12C8	(0) 110
12E5	(0) 110
12F5	(0) 110
12G7G	(0) 110
12H6	(0) 110
12J5	(0) 110
12J7	(0) 110
12K7	(0) 110, 111 (1) 36
12K8	(0) 111 (1) 36
12L8	(0) 111
12Q7	(0) 111 (1) 36
12S8	(2) 9
12SA7	(0) 111, 112 (1) 36
12SC7	(0) 112 (1) 36
12SF5	(0) 113 (1) 36
12SF7	(0) 113
12SG7	(0) 113 (1) 37
12SH7	(0) 113 (1) 37
12SJ7	(0) 113 (1) 37
12SK7	(0) 113, 114 (1) 37 (2) 10
12SL7	(0) 114 (1) 37
12SN7	(0) 114 (1) 37
12SQ7	(0) 114, 115 (1) 37 (2) 10

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
12SR7	(0) 115 (1) 38
12SS7	(2) 10
12SW7	(0) 115 (1) 38
12SX7	(0) 115
12SY7	(0) 115 (1) 38
12V6	(2) 10
12X4	(2) 10
12Z3	(0) 115 (1) 38
12Z5	(0) 115
14A4	(0) 115
14A5	(0) 116
14A7	(1) 38
14A7/12B7	(0) 116
14AF7	(1) 38
14AF7/XXD	(0) 116
14B6	(0) 116 (1) 38
14B8	(0) 116
14C5	(0) 116
14C7	(0) 116 (1) 39
14E6	(0) 116 (1) 39
14E7	(0) 116, 117
14F7	(0) 117 (1) 39
14F8	(0) 117 (1) 39
14H7	(0) 117
14J7	(0) 117 (1) 39
14N7	(0) 117 (1) 39, 40
14Q7	(0) 117 (1) 40
14R7	(0) 117
14S7	(0) 117
14V7	(0) 117
14W7	(0) 117
14X7	(2) 10
14Y4	(0) 117
15	(0) 117, 118
17	(0) 118
18	(0) 118
19	(0) 118
19AQ5	(2) 10
19BG6	(0) 118
19C8	(0) 118 (1) 40
19J6	(2) 10
19T8	(0) 118 (1) 40
19V8	(1) 40
19X3	(2) 10
19Y3	(2) 10
20	(0) 118
20J8	(0) 118
21A7	(0) 118
22	(0) 118
24A	(0) 118
25A6	(0) 118, 119
25A7	(0) 119
25AC5	(0) 119
25AV5	(0) 119
25B5	(0) 119
25B6	(0) 119
25B8GT	(0) 119
25BK5	(2) 11
25BQ6	(0) 119
25C6	(0) 119
25D8GT	(0) 120
25L6	(0) 120 (2) 11
25N6	(0) 120 (1) 40
25S	(0) 120
25W4	(0) 120
25X6	(0) 120
25Y4	(0) 120
25Y5	(0) 120

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
25Z3	(0)120
25Z4	(0)120
25Z5	(0)120, 121
25Z6	(0)121
26	(0)121
26A6	(0)121 (2)11
26A7	(0)121 (2)11
26BK6	(0)121
26C6	(0)121
26CG6	(2)11
26D6	(0)121 (2)11
26Z5W	(1)40
27	(0)121
28D7	(0)122 (2)12
28D7W	(0)122
28Z5	(0)122 (2)12
30	(0)122
31	(0)122
32	(0)122
32L7	(0)122
33	(0)122 (1)40
34	(0)122 (1)41
35A5	(0)122, 123
35B5	(0)123
35C5	(0)123
35L6	(0)124 (1)41
35W4	(0)124
35Y4	(0)124, 125 (1)41
35Z3	(0)125 (1)41
35Z4	(0)125 (1)41
35Z5	(0)125, 126 (1)41, 42
35Z6	(0)126
35/51	(0)126 (1)41
36	(0)126
37	(0)126
38	(0)126
39/44	(0)126
40	(0)126
40Z5	(1)42
41	(0)127
42	(0)127, 128
43	(0)128
45	(0)128 (1)42
45Z3	(0)128
45Z5	(0)128 (1)42
46	(0)128
47	(0)128
48	(0)129
49	(0)129
50	(0)129
50A5	(0)129 (1)42
50AX6	(0)129
50AX6G	(2)12
50B5	(0)129 (1)42
50C5	(0)129 (1)42
50C6	(0)129 (1)42, 43
50L6	(0)129 (1)43
50X6	(0)130
50Y6	(0)130 (1)43
50Y7	(0)130
50Z6	(0)130
50Z7	(0)130
EF50	(0)130
52	(0)130
VT52	(0)130
53	(0)130
55	(0)130

TUBE	PAGE
55S	(0)130
56	(0)131
56AS	(0)131
56S	(0)131
57	(0)131 (1)43
57AS	(0)131
57S	(0)131
58	(0)131 (1)43
58AS	(0)131
58S	(0)131
59	(0)131
70A7	(0)131
70L7	(0)131, 132
71A	(0)132 (1)43
75	(0)132
76	(0)132, 133
77	(0)133
78	(0)133, 134
79	(0)134, 144
80	(0)134
81	(0)134
82	(0)134
83	(0)134
83V	(0)135
84	(0)135

TUBE	PAGE
84/6Z4	(0)135 (1)43
85	(0)135, 136
85AS	(0)136
89	(0)136 (1)43
99V	(0)136
X99	(0)136
117L7	(0)136
117L7/M7	(0)136
117M7	(0)136
117N7	(0)136, 137 (1)43
117P7	(0)137
117Z3	(0)137
117Z4	(0)137
117Z6	(0)137
182B/482B	(0)137
183/483	(0)137
210T	(0)137
485	(0)137
807	(1)43, 44
864	(0)137
950	(0)137
954	(0)137
955	(0)138
956	(0)138
957	(0)138

TUBE	PAGE
958A	(0)138
959	(0)138
FM1000	(0)138
1005/CK1005	(0)138
CK1013	(0)138
1201	(0)138
1203	(0)138
1204	(0)138
1206	(0)138
1221	(0)138
1223	(0)138
1229	(0)138
1230	(0)138
1231	(0)138
1232	(0)138
1247	(0)138
1265	(0)138
1266	(0)138
1267	(0)138
1273	(0)138
1274	(0)138, 139
1275	(0)139
1276	(0)139
1280	(0)139
1284	(0)139
1291	(0)139

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE
1293	(0)139
1294	(0)139
1299	(0)139
1603	(0)144
1611	(0)144
1612	(0)139
1614	(0)139 (1)44
1619	(0)139
1620	(0)139
1626	(0)139
1629	(0)139
1634	(0)139
1644	(0)139
1654	(0)139
2050	(0)139
2051	(0)139
5517	(0)139
5517/CK1013	(0)140
5590	(0)140 (2)12
5591	(0)140 (2)12
5608-A	(0)140
5618	(0)140
5635	(0)140
5636	(0)140
5642	(1)44
5643	(0)140
5646	(0)140
5647	(0)140
5654	(0)140
5670	(0)140 (2)12
5672	(0)140
5676	(0)140
5677	(0)140
5678	(0)140
5679	(0)140
5686	(0)140
5687	(0)140
5691	(0)140
5692	(0)141
5693	(0)141
5694	(0)141
5697	(0)141
5702	(0)141
5703	(0)141
5704	(0)141
5718	(0)141
5719	(0)141
5722	(0)141
5725	(0)141
5726	(0)141
5731	(0)141
5744	(0)141
5783	(0)141
5784	(0)141
5785	(0)141
5787	(0)141
5812	(0)141
5823	(0)141
5824	(0)141
5840	(0)141
5847	(0)141
5879	(0)141
5881	(1)44
5896	(0)141
5897	(0)141
5898	(0)142
5899	(0)142
5900	(0)142
5901	(0)142
5910	(0)142
5915	(0)142
5931	(0)142
5932	(0)142
7000	(0)144
7700	(0)144
9001	(0)142
9002	(0)142

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE	TUBE	PAGE	TUBE	PAGE
9003	(0)142	9006	(0)142	XXD	(1)44
9004	(0)142	KT66	(1)43	XXFM	(0)142
9005	(0)142	X6030	(0)142	XXL	(0)142

PICTURE TUBES

7HP4	(2)15	12JP4	(2)16	14BP4A	(2)18
7NP4	(2)15	12KP4	(2)16	14CP4	(2)18
7QP4	(2)15	12KP4A	(2)16	14DP4	(2)18
7WP4	(2)15	12LP4	(2)16	14EP4	(2)18
8AP4	(2)15	12LP4A	(2)16	14FP4	(2)18
8AP4A	(2)15	12QP4	(2)16, 17	15AP4	(2)18
10BP4	(2)15	12QP4A	(2)16, 17	15CP4	(2)18
10BP4A	(2)15	12RP4	(2)17	15DP4	(2)19
10CP4	(2)15	12TP4	(2)17	16AP4	(2)19
10EP4	(2)15	12UP4	(2)17	16AP4A	(2)19
10FP4	(2)15	12UP4A	(2)17	16CP4	(2)19
10FP4A	(2)15	12UP4B	(2)17	16DP4	(2)19
10MP4	(2)15	12VP4	(2)17	16DP4A	(2)19
10MP4A	(2)15	14BP4	(2)18	16EP4	(2)19

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE	TUBE	PAGE	TUBE	PAGE
16EP4A	(2) 19	17AP4	(2) 22	19DP4A	(2) 24
16EP4B	(2) 19	17BP4	(2) 22	19EP4	(2) 24
16FP4	(2) 19	17BP4A	(2) 22	19FP4	(2) 24
16GP4	(2) 19	17BP4B	(2) 22	19GP4	(2) 24
16HP4	(2) 19	17BP4C	(2) 22	19JP4	(2) 24
16HP4A	(2) 19	17CP4	(2) 22	20CP4	(2) 24
16JP4	(2) 19, 20	17CP4A	(2) 22	20CP4A	(2) 24
16JP4A	(2) 19, 20	17FP4	(2) 23	20CP4C	(2) 24, 25
16KP4	(2) 20	17FP4A	(2) 23	20DP4	(2) 25
16KP4A	(2) 20	17HP4	(2) 23	20DP4A	(2) 25
16LP4	(2) 20	17HP4A	(2) 23	20FP4	(2) 25
16LP4A	(2) 20	17JP4	(2) 23	20GP4	(2) 25
16MP4	(2) 20	17KP4	(2) 23	20HP4	(2) 25
16MP4A	(2) 20	17LP4	(2) 23	20HP4B	(2) 25
16QP4	(2) 20	17LP4A	(2) 23	21EP4	(2) 25
16RP4	(2) 20	17QP4	(2) 23	21EP4A	(2) 25
16SP4	(2) 21	17RP4	(2) 23	21EP4B	(2) 25
16SP4A	(2) 21	17SP4	(2) 23	21FP4	(2) 25
16TP4	(2) 21	17UP4	(2) 23	21FP4A	(2) 26
16UP4	(2) 21	17VP4	(2) 23	21KP4	(2) 26
16VP4	(2) 21	19AP4	(2) 24	21KP4A	(2) 26
16WP4	(2) 21	19AP4A	(2) 24	21WP4	(2) 26
16WP4A	(2) 21	19AP4B	(2) 24	21ZP4	(2) 26
16XP4	(2) 22	19AP4C	(2) 24	21ZP4A	(2) 26
16YP4	(2) 22	19AP4D	(2) 24	22AP4	(2) 26
16ZP4	(2) 22	19DP4	(2) 24	22AP4A	(2) 26

SUPPLEMENT—RECEIVING TUBE SUBSTITUTION GUIDE

TUBE	PAGE	TUBE	PAGE	TUBE	PAGE
24AP4	(2) 26	27EP4	(2) 26	27NP4	(2) 26
24AP4B	(2) 26	27GP4	(2) 26	27RP4	(2) 26

BECOME A TV SERVICING EXPERT!

TV MANUFACTURERS' RECEIVER TROUBLE CURES SERIES

POSITIVE CURES for TV troubles! Gives you exact directions for correcting TV receiver performance "bugs." Each cure is official, factory-authorized, direct from the receiver's manufacturer. Listings by manufacturer and model or chassis number. Helps correct the most difficult faults — picture jitter, hum, buzz, tearing, etc. *One service job will more than pay the cost of this series of time-saving books!*

VOLUME 1 covers: Admiral, Airking, Andrea, Arvin, Belmont-Raytheon, Bendix, Calbest, Capehart-Farnsworth, CBS-Columbia, Certified, Crosley, Dumont.
(Cat. No. 143)

VOLUME 2 covers: Emerson, Fada, Firestone, Freed, Gamble-Skogmo, General Electric, Hallicrafters, Hoffman, Industrial TV, International TV, Jackson.
(Cat. No. 143-2)

VOLUME 3 covers: Kaye-Halbert, Kent, Magnavox, Majestic, Meck, Mercury, Midwest, Montgomery Ward, Motorola, Muntz, National, North American Philips, Olympic, Pacific-Mercury, Packard-Bell, Philco.
(Cat. No. 143-3)

VOLUME 4 covers: Philharmonic, Pilot, Radio & Television (Brunswick), RCA Victor, Remington (Rembrandt), Scott, Sears-Roebuck, Sentinel, Setchell-Carlson, Shaw TV.
(Cat. No. 143-4)

VOLUME 5 covers: Prominent manufacturers not covered in the first four volumes.
(Cat. No. 143-5)

Each volume over 115 pages **5¼"x8¼"**
Illustrated **Each vol. Net Price $1.80**

HOW TO TROUBLESHOOT A TV RECEIVER
by J. Richard Johnson

Written to aid the service technician to systematically troubleshoot all TV receivers. Step-by-step guide to troubleshooting. Explains picture tube patterns. Interprets schematics. Explains trouble symptoms. Tells which tools to buy for field servicing. Tells which tools to buy for shop servicing. Tells what test equipment is needed. Tells what tube stock is needed. Discusses common tube faults, etc. In every way a completely practical book. 128 pages, 5½" x 8½", illustrated. (Cat. No. 152.)

Only $1.80.

HOW TO USE METERS
by John F. Rider

PANEL TYPE, volt-ohm-milliammeter, vacuum-tube voltmeters for servicing TV and radio receivers, audio amplifiers, power supplies; for use and repair of amateur transmitters. Written for the service technician, the TV and radio student, and ham. Completely practical!

CHAPTERS: 1. Principle and Construction of AC Meter Movements; 2. Principle and Construction of Meters Other than the Moving Coil Type; 3. Current and Voltage Readings; 4. Power Measurement and Wattmeters; 5. Adapting Meter Movement for DC Measurements; 6. Adapting Simple Meters for Audio and Power Frequencies; 7. Adapting Simple Meters for RF Measurements; 8. Volt-ohm-milliammeters; 9. Vacuum Tube Voltmeters and Volt-ohm Meters; 10. Applications of Meters; 11. Do's and Don'ts of Meter Use; Index.

Over 140 pages **5½"x8½"** **Illustrated**
(Cat. No. 144) **Paper bound** **Net Price $2.40**

SERVICING TV VERTICAL AND HORIZONTAL OUTPUT SYSTEMS
by Harry Thomas

A COMPLETE explanation of how vertical and horizontal output systems function. Discusses types of circuits used in TV receivers—waveforms encountered, construction of components, component constants, requirements and troubleshooting. For the TV service technician and the student of TV servicing. No other book in print offers equivalent coverage of the subject or explains details as clearly.

CHAPTERS: 1. The Basic TV Picture System in Receivers; 2. Organization of the Basic Vertical and Horizontal Output System; 3. How the Vertical Output System Works; 4. How the Horizontal Output System Works; 5. The Deflection Yoke; 6. Variations in Horizontal Output Systems; 7. Construction and Replacement of Components in TV Output Systems; 8. Troubleshooting Vertical Output Systems; 9. Troubleshooting Horizontal Output Systems; Index.

Over 140 pages **5½"x8½"** **(Cat. No. 150)** **Price $2.40**

TV SWEEP ALIGNMENT TECHNIQUES
by Art Liebscher, Former RCA Test Equipment Specialist

NEVER BEFORE has there been a book such as this on TV sweep alignment! An expert gives you accurate, time-saving methods—and tells you how they work. The new SUPER-MARK method of TV sweep alignment is introduced. Get maximum value from your test equipment and learn new uses. Chock-full of sweep curve pictures. Valuable for servicing in UHF signal areas.

CHAPTERS: 1. Introduction to Modern Sweep Alignment; 2. Modern Sweep Alignment Techniques; 3. Markers; 4. The Supermark; 5. Sweep Curves; 6. Tuner Curve Formation; 7. Intermediate Frequency Alignment; 8. Intermediate Frequency Curve Alignment; 9. Sound I-F and Sound Detector Alignment; 10. Video Amplifier Response Testing; 11. UHF Sweep Alignment, Index.

(Cat. No. 145)
123 pages **5½"x8½"** **Illustrated** **Net Price $2.10**

OBTAINING AND INTERPRETING TEST SCOPE TRACES
by John F. Rider

OVER 500 actual photographs of test scope traces. Shows how to use scopes and what the traces mean. Valuable for servicing TV receivers, FM and AM radio receivers, audio systems and test equipment. Specific test equipment set-ups shown with each application. No other book like it!

Typical Chapters: What's in a Scope; Getting Familiar With the Scope; Auxiliary Test Equipment for the Scope; Using the Scope for Checking Test Equipment; Applying the Scope to Testing Transmitters; How to Use the Scope with FM Receivers; How to Use the Scope With AM Receivers; Checking Audio Systems With the Scope; Checking Power Supplies with the Scope; the Scope's Use in Checking Components; How to Use the Scope With TV Receivers.

Over 140 pages **5½"x8½"** **Illustrated**
(Cat. No. 146) **Paper bound** **Net Price $2.40**

RADIO TROUBLESHOOTING GUIDEBOOK
by John F. Rider & J. R. Johnson

MORE THAN 100 MILLION radio receivers are now in use. Many millions are sold every year. Here is a troubleshooting guide-book that covers them all! Every type of AM and FM receiver is discussed—with explicit information about troubles and possible causes. Completely practical for the radio service technician and the radio student.

CONTENTS: Part 1. Superheterodyne Receivers. Chapter 1. AM Superheterodynes; Chapter 2. FM Superheterodynes. Part 2. Fundamental Troubleshooting. Chapter 3. Fundamental Troubleshooting Systems. Part 3. Common Systems and Remedies. Chapter 4. Undesired Signals; Chapter 5. Weak Signals; Chapter 6. Distortion; Chapter 7. Noise; Chapter 8. Dead Receiver; Index. **(Cat. No. 149)**

Over 140 pages **5½"x8½"** **Illustrated** **Paper bound**
Net Price $2.40

ALL PRICES SUBJECT TO CHANGE WITHOUT NOTICE

BECOME A TV SERVICING EXPERT!

HIGH FIDELITY SIMPLIFIED

by Harold D. Weiler

LEARN what components you need to start you on the path to the ultimate in listening enjoyment. "Those planning high fidelity music systems for their homes will save themselves time, money and trouble by reading this first, *then* making purchases." *Radio-Television News.*

Typical chapters: Sound!; Acoustics, Electronics and Music; The Simple Loudspeaker; The High-Fidelity Loudspeaker; Loudspeaker Enclosures; The Basic Amplifier; The Amplifier —Part 2; the Record Player; The Tuner; Use of the Home Music System, Tape Recorders.

208 pages 5½"x8½" (Cat. No. 142) Net Price $2.50

HOW TO USE SIGNAL & SWEEP GENERATORS

by J. Richard Johnson

THE FIRST BOOK devoted entirely to Signal Generators. Gives various test uses for AM Signal Generators, FM Signal Generators, Test Oscillators, Marker Generators, Calibrators, and Sweep Generators. Problems involved in using this equipment and how to overcome them. Illustrations of typical test set-ups. Shows means of adapting signal generators to various applications to increase their usefulness. Completely discusses all applications of all generators used in AM, FM Radio and TV servicing. Explains exactly what signal generators are and what they do.

CHAPTERS: 1. Purposes and Types of Signal Generators; 2. AM Signal Generators; 3. Marker Generators and Calibrators; 4. Sweep Generators; 5. Frequency Characteristics; 6. Output-Voltage Characteristics; 7. Terminating, Matching, and Grounding; 8. Principles of Sweep-response Analysis; 9. How to Set-up for TV Sweep Alignment; 10. Other Signal Generator Applications; (1) AM Receiver Alignment; (2) AM Receiver Performance Tests; (3) General AM Signal Generator Applications; (4) General Applications of Sweep Generators; 11. Signal-generator Maintenance Tests; Index.

Approx. 120 pages 5½"x8½" Illustrated (Cat. No. 147) Net Price $2.10

RADIO OPERATOR'S LICENSE Q&A MANUAL

By Milton Kaufman

Fourth Edition, January 1953
(Elements 1 through 8)

SYSTEMATICALLY LISTED are the questions and answers to past FCC exams *plus* a FOLLOW-THROUGH discussion of the answer, so necessary for a complete understanding of the technical question. Abundant illustrations make difficult technical questions picture-clear.

Not simply an optional text, ***but an indispensable reference volume*** for student and operator, it is up-to-date in all respects as of the publication date. Based on the Government Study Guide and supplementary FCC releases, the volume offers valuable appendices (Small Vessel Direction Finders and Automatic Alarm) never before available in a book of this type.

You will find yourself constantly referring to this complete, comprehensive handbook for a thorough review of essential theory, as well as for a refresher for advancement in the field.

(Cat. No. 130)

730 pages 5½"x8½" 243 Illustrations Net Price $6.60

ELEMENT VIII—SHIP RADAR TECHNIQUES

Identical text as in book, separately bound for those specially interested in Ship Radar. Uses the same question-answer-discussion pattern.

32 pages 5½"x8½" (Cat. No. 130A) Net Price $ .78

GUIDE TO AUDIO REPRODUCTION

by David Fidelman

HERE'S AN A TO Z explanation of the reproduction of sound. Discusses all phases of audio reproduction systems and their requirements. Design, construction, assembly, and testing of these systems and their components are fully covered. Full explanation of the circuitry of preamplifiers, amplifiers; complete discussion of phono cartridges, tuners, microphones, loudspeakers, and enclosures. Valuable for the radio and TV service technician, engineer and experimenter. A companion volume to the best-selling HIGH FIDELITY SIMPLIFIED.

Over 250 pages 5½"x8½" Illustrated (Cat. No. 148) Net Price $2.50

UHF PRACTICES AND PRINCIPLES

by Allan Lytel

LEARN NOW about the uhf practices and principles that will affect you in your everyday work in the near future. Operate successfully and profitably with the knowledge of special uhf techniques, concepts, and circuits explained here. UHF transmitting and receiving equipment is discussed as it applies to the various services using it. Much of the emphasis is on the practical applications to uhf television. UHF will mean added income for you. Learn about it now!

(Cat. No. 141)

390 pages 5½"x8½" 285 Illustrations Net Price $6.60

RECEIVING TUBE SUBSTITUTION GUIDE BOOK

by H. A. Middleton

ANSWERS ALL TUBE PROBLEMS by listing 2,500 radio-television tube substitutions in numerical sequence with accompanying wiring instructions, original and substitute tube socket illustrations. You will find information to help you turn out jobs that would otherwise remain on the shelf because of lack of proper tubes.

224 pages 8½"x11" (Cat. No. 135) Net Price $3.00

FIRST SUPPLEMENT, RECEIVING TUBE SUBSTITUTION GUIDE BOOK

750 completely new and different radio-TV tube substitutions not listed in the first edition. Special section on substituting tubes in television receivers.

48 pages 8½"x11" (Cat. No. 139) Net Price $ .99

ENCYCLOPEDIA ON CATHODE-RAY OSCILLOSCOPES AND THEIR USES

by John F. Rider and Seymour D. Uslan

THE ONLY BOOK of its kind that tells you all you should know about an oscilloscope, this text fully and clearly describes the device, its construction and its capabilities. It explains what a scope is, what it can do, and how it is used. The authors thoroughly cover the applications of the oscilloscope in servicing, engineering, and research, and offer thousands of time-saving, labor-saving references, charts, waveforms, etc.

All oscilloscopes produced during 1940-1950, a total of more than 70 different models, are accurately described, with specifications and wiring diagrams.

If you are planning to buy a scope, this book will help you select the type best suited to your needs. If you already own one, it will show you how to increase your instrument's usefulness and value to you. We guarantee this book will save and earn many, many times its cost to you!

(Cat. No. 133) • Half a million words • Easy to read

992 pages 3,000 Illustrations 8½"x11" Net Price $9.00

Buy These Publications from Your Favorite Rider Distributor.